

Remote Control Set Up



Pair the TV, DVD, VCR or Audio to the Cobalt TV Remote

1. Manually turn ON the device that you want to setup on the remote.
2. Press the Mode Key for the device you want to set up.
3. Press and Hold SETUP until the MODE KEY (TV, AUD, DVD, VCR, STB) blinks twice.
4. Press and release the MODE KEY (TV, AUD, DVD, VCR, STB) for device you wish to setup. The mode key stays lit.
5. Find your device and brand from the charts below and note the digit key assigned to your brand. Press and hold down the assigned DIGIT KEY for your device/brand while pointing the remote to the device. If your brand is not listed, please see the back of this page for instructions.
6. Let go of the key when your device turns OFF. Setup for that device is complete.



TV Codes

Digit	Brand
1	Insignia
2	LG
3	Panasonic
4	Philips Magnavox
5	Samsung

Digit	Brand
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

Audio	
Digit	Brand
1	Bose
2	Denon
3	LG
4	Onkyo
5	Panasonic
6	Philips
7	Pioneer
8	Samsung
9	Sony
0	Yamaha

DVD/VCR	
Digit	Brand
1	Insignia
2	LG
3	Panasonic
4	Philips Magnavox
5	RCA
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

Searching for Your Code

If your home entertainment device does not respond to the remote control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

To search:

1. Turn on your TV.
2. On the Cobalt TV remote control, press TV button once; it will blink once.
3. Press and hold SETUP button until the TV button blinks twice.
4. Enter 991. The TV button will blink twice.
5. Press and release the CH+ button continuously, then stop when the TV turns off.
6. Press SETUP button and the TV button will blink twice to indicate that the code is saved.
7. Press POWER button and the TV will come on.
8. Press the STB button and now the remote is ready to use.

NOTE: If the TV does not turn on during step 5, then slowly press and release CH- to go back through the codes, then press SETUP when the TV turns on.

To search for the codes of your other devices, repeat steps 1 through 5, but substitute the appropriate key (e.g., VCR, DVD, AUD, or STB) to search for your device.

